



No.	PART No.	DESCRIPTION	Q'TY USED	NOTE
1	REMO30-01	REMO30 base assembly		
2	REMO30-02	Tilt arm assembly	1	
3	REMO30-03	Tilt arm locking handle	1	
4	REMO30-04	Tilt drive switching lever	1	
5	REMO30-05	Bowl clamp	1	
6	REMO30-06	Control box assembly	1	
7	REMO30-07	Clamp locking knob assembly	1	With Friction rubber (2 pcs set)
8	REMO30-08	Friction rubber	1	4 pcs set
9	REMO30-09	Grip	1	
10	REMO30-10	End cap	1	
11	REMO30-11	AC/DC adapter	1	
12	REMO30-12	HDMI cable	1	L = 5m / 16.5'
13	REMO30-13	LANC cable	1	L = 1m / 3.3'
14	REMO30-14	BNC cable	1	L = 1m / 3.3'
15	REMO30-15	BNC to RCA adapter	1	
16	REMO30-16	HDMI to Mini HDMI adapter	1	
17	REMO30-17	Carrying case	1	