ALX S4,S8,S12 SERVICE PARTS 3 (22)5 21 (13)(16)[3]ALX SR4, (18)SR8, SR12 (20)(11 (15)Require proper types of adhesive. a: Two-component adhesive. (Epoxy resin system) b: Instant adhesive. c: Thread locking adhesives. (Anaerobic adhesive) Grease that doesn't affect plastic. Grease which is applied before shipment. Ī Ð (19 Q'TY NOTE PART No. **DESCRIPTION** No. **USED** Bearing plate assembly 1 ALXS-1 2 ALXS-2 Bearing plate 1 Bearing bolt assembly ALXS-3 2 Pcs. set (Bolt 2Pcs.+Bearing 2Pcs.) 3 2 Bearing 4 ALXS-4 4 2 Pcs. set Slider body assembly ALXS-5 1 ALXS-6 Brake knob Slider body ALXS-7 With level and friction push-piece assembly. Friction push-piece assembly ALXS-8 Camera screw (3/8-16UNC) 9 ALXS-9 1 Bearing shaft assembly 2 Shaft 1Pcs.+Bearing 2Pcs.+Bolt 2Pcs. 10 ALXS-10 Leg base assembly With leg base knob 1Pcs. ALXS-11 2 11 Hexagonal socket cap low head bolt 12 ALXS-12 1 3 Pcs. set Leg base With leg base knob 1Pcs. 13 ALXS-13 2 Leg base stopper rubber 1 14 ALXS-14 4 Pcs. set 15 ALXS-15 Leg assembly 4 Leg 16 4 ALXS-16 Leg lock knob 17 ALXS-17 4 Leg adjuster 18 ALXS-18 4 Tripod mount adapter 19 ALXS-19 1 Bowl clamp 20 ALXS-20 1 21 ALXS-21 Protector 1 22 ALXS-22 1 With brush and hexagonal wrench. Maintenance tool

Leg base knob

23

ALXS-23

With Washer and O-ring.